


RECEIVER ADJUSTMENT— continued

ADJUSTMENT	ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT	
		UNIT	LOCATION		UNIT	ADJUST
NOISE BLANKER	1 •Displayed freq. : 14.100000 MHz •Mode : USB •[P.AMP1] : ON •[NB] : OFF •Connect an SSG to [ANT1] connector and set as: Frequency : 14.1015 MHz Level : 18 μ V* (-82 dBm) Modulation : OFF and apply the following signal to [ANT1] connector.  •Preset R866 to 12 o'clock position. •Receiving	MAIN	Connect an oscilloscope to check point, CP861.	Maximum noise level	MAIN	L861, L862
	2 •Set an SSG output level as: 10 μ V* (-87 dBm) •[NB] : ON •Receiving	Rear panel	Connect an oscilloscope to [SP] jack with an 8 Ω load.	At the point where noise blanker is just activated.		R866

*This output level of a standard signal generator (SSG) is indicated as SSG's open circuit.

•MAIN and RF units (Bottom side of the transceiver)

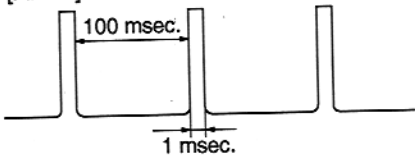